

Installation and Operating Instructions Remote Transmission Device RAMOC® VD5-MO8	Innotas Produktions GmbH, Friedrich-Engels-Str. 46, D-15745 Wildau ☎ + 49 (3375) 529649 0 ☎ + 49 (3375) 529649 24 Email: info@innotas-service.de www.innotas-service.de	
Last update - 06.06.2014	Page 1/7	

Device Description:


The remote transmission device VD5-MO8 is part of the RAMOC® product family which is intended for mobile radio based transmission of process data and the remote switching of industrial equipment. The VD5-MO8 is used for remote viewing and mobile-based remote transmission of up to 8 input states via GPRS. The radio transmission of the input states is done periodically as well as upon reaching predetermined limits or on demand.

Safety notes:

- Disconnect the unit from power supply during transportation and mounting of the device!
- Use a damp cloth and washing up liquid to clean the case of the unit. Under no circumstances use abrasives or other chemical cleaners!
- Mount the GSM antenna in a sufficient distance from people, animals and electronic equipment
- Follow the guidelines for lightning protection while laying out cables for telecommunication equipment and assembling the antenna.
- The technical data specified for the VD5-MO8 must be observed.

Mounting:

For mounting the device the cover has to be removed. The device has to be mounted on a flat surface with at least two screws arranged diagonally (Note: When mounting the device on a metal plate it is recommended to replace the antenna directly mounted on the device by an antenna, mounted at a remote place and connected with the device by a corresponding connection cable.)

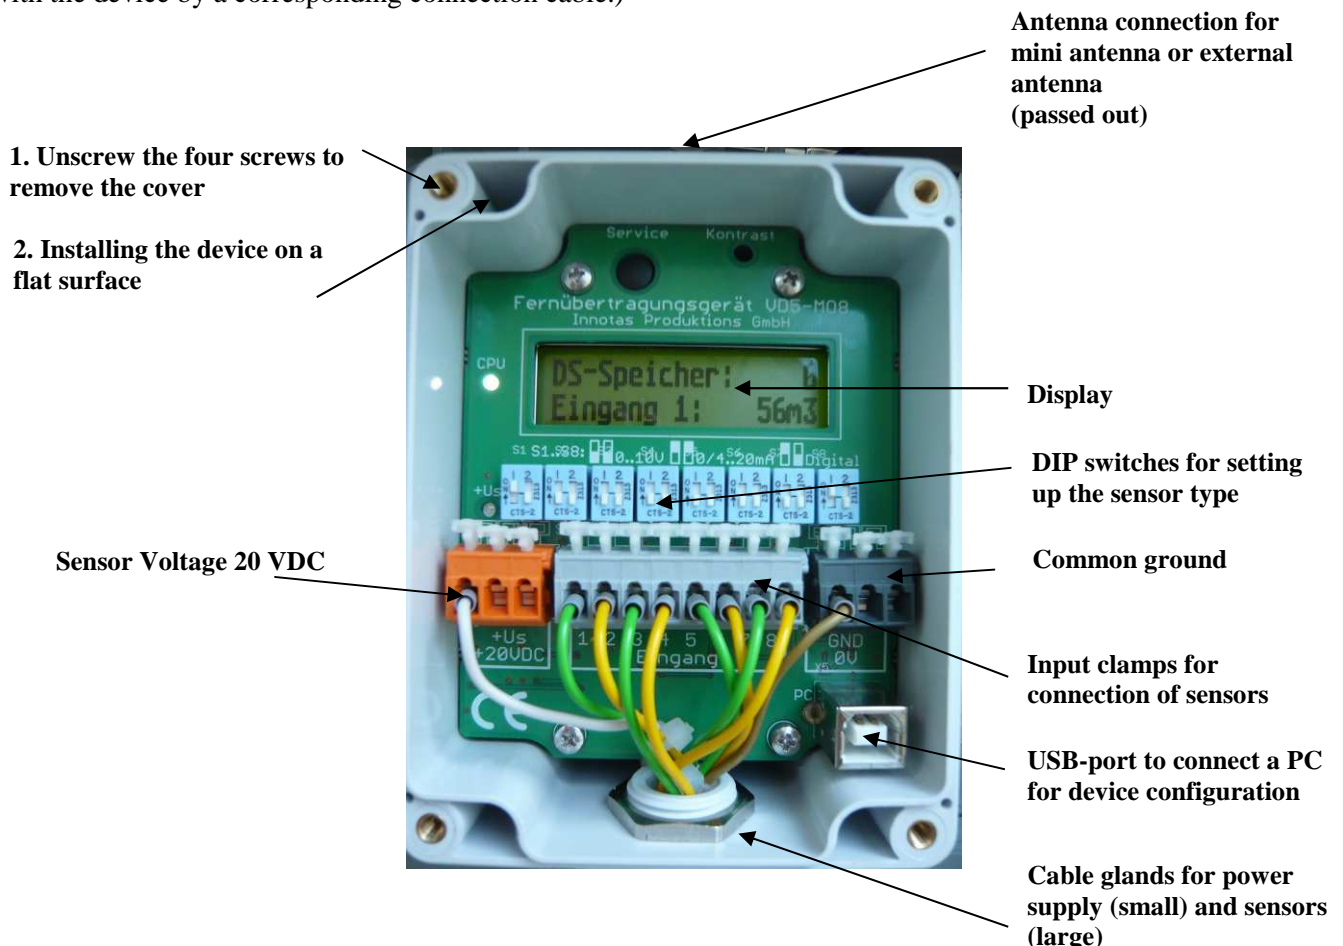

Installation and Operating Instructions Remote Transmission Device RAMOC® VD5-MO8

Innotas Produktions GmbH,
Friedrich-Engels-Str. 46, D-15745
Wildau
☎ + 49 (3375) 529649 0
✉ + 49 (3375) 529649 24
Email: info@innotas-service.de
www.innotas-service.de




Last update - 06.06.2014

Page 2/7

Inserting the GSM SIM card:

Note: The device must be disconnected from energy supply while inserting the GSM SIM card!

1. Remove the device cover
2. Remove upper (visible) circuit board ("Sensor connection board") by unscrewing the four screws carefully and disconnect it from the lower circuit board ("Main Board") by carefully disconnecting the internal flat ribbon cable.
3. Open the SIM card holder on the now visible circuit board ("Main Board") by sliding the metal slide in the direction of cable glands and folding up the SIM card holder. Insert the SIM card and make sure that the chip on your SIM card points towards cable glands and the corner recess points away from the motherboard.
4. Close SIM card holder and lock by sliding the metal slide back.

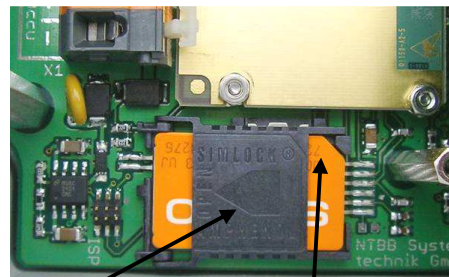

SIM card holder. To open it push the slide to the left.

Observe recess in SIM card


Power supply connection:

1. Disconnect the power supply (eg remove mains plug from socket)
2. Remove the device cover
3. Remove upper (visible) circuit board ("Sensor connection board") by unscrewing the four screws carefully and disconnect it from the lower circuit board ("Main Board") by carefully disconnecting the internal flat ribbon cable.
4. Thread the power supply cable through the small cable entry of the case, strip a length of about 5 mm of the cable wires and connect them to the power supply terminal clamps of the main board. Thereby observe the right polarity.

Labelling		Colour of Terminal Clamp	Meaning
+	Voltage	orange	Supply voltage plus 6 .. 25 V DC (16 V when using the accu buffering)
-		dark gray	Supply voltage minus (GND)
+	Accu	orange	Rechargeable battery 12V - plus polarity
-		dark gray	Rechargeable battery 12V – minus polarity (GND)

Note: The rechargeable battery circuit will only be active after its activation by the control center.

5. Tighten the small gland.

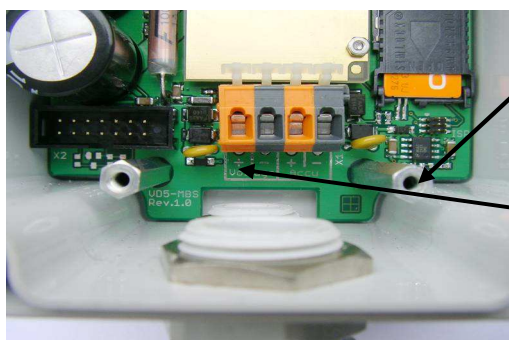

1. Unscrew the four screws in order to remove the upper

2. Terminal clamps of the power supply

Finally reconnect the internal flat ribbon cable of the upper board ("Sensor connection board") to the „Main Board“ and mount the upper board by means of the four screws.

Installation and Operating Instructions

Remote Transmission Device

RAMOC® VD5-MO8

Innotas Produktions GmbH,
Friedrich-Engels-Str. 46, D-15745
Wildau

☎ + 49 (3375) 529649 0

☎ + 49 (3375) 529649 24

Email: info@innotas-service.de
www.innotas-service.de



Last update - 06.06.2014

Page 3/7

Sensor connection:

1. Remove the device cover
2. For each input 2 DIP-switches have to be set up according to the below illustration

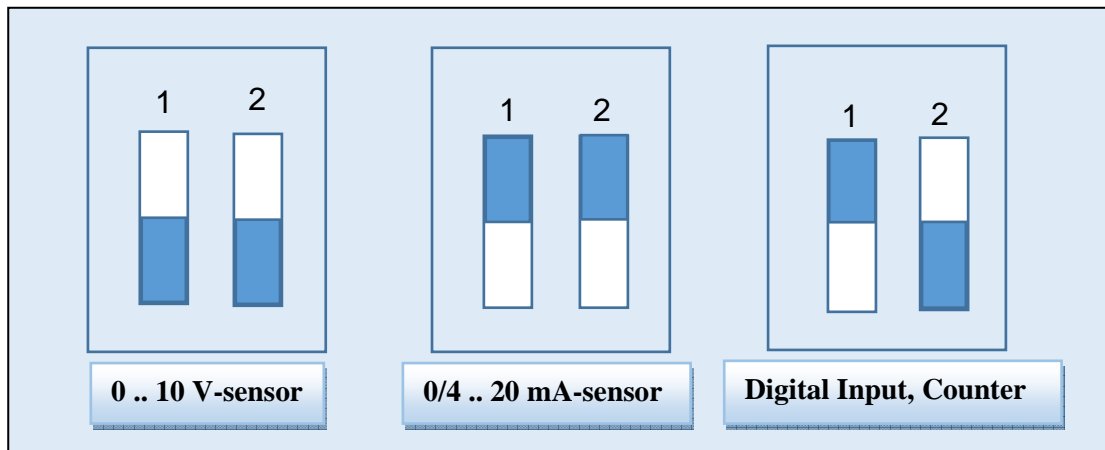



Illustration: Setup of DIP-switches depending on the sensor type

3. Thread the sensor cable through the large cable entry of the case.
4. Strip a length of about 5 mm of the cable wires and connect them to the terminal clamps.
5. Tighten the large gland.

Subsequently, the case cover has to be mounted, while checking the correct fit of the inserted seal. Finally, the cable glands have to be checked and tightened if necessary.

Installation and Operating Instructions Remote Transmission Device RAMOC® VD5-MO8	Innotas Produktions GmbH, Friedrich-Engels-Str. 46, D-15745 Wildau ☎ + 49 (3375) 529649 0 ☎ + 49 (3375) 529649 24 Email: info@innotas-service.de www.innotas-service.de	
Last update - 06.06.2014	Page 4/7	

Implementation:

After connecting the power supply the remote transmission device boots automatically. Please monitor the display output during the boot process. The “Service-Button” allows choosing between different display representations.

Basic screen display

RAMOC VD5-MO GSM: online DS-Speicher: 22 . -	Line	Content
	1: Title line	Name of the shown screen display
	2: GSM	GSM-GPRS - Status of the internet connection to the server
	3: DS-Speicher: Total-DS:	Number of not yet transmitted data (measured values), remained in the device memory Total number of records received from the transmitters since power on
	4: Energievs.:	Power supply status

Meaning of the red light "+ Us":

- lights when sensors are supplied with energy and analog measurement values are recorded

Meaning of the red light "Standby / RX":

- flickers irregularly, if PC is connected

Operation:

Generally, after booting the remote transmission device does not requires any further action. However, the following operator actions are possible while the cover is removed:

Pressing the Service-Button in the device:

- Short pressing: switch the display screen
- Press and hold for at least 6s: Reset the device

Subsequently, the case cover has to be mounted, while checking the correct fit of the inserted seal.



Service-Button

Contrast control

Maintenance:

The remote transmission device is maintenance-free. If required, the display contrast can be adjusted with the cover removed by means of a Phillips screwdriver PH0 size. Following the contrast setting, the case cover has to be mounted, while checking the correct fit of the inserted seal.

Repair:

Repairs may only be carried out by the manufacturer. The device must be replaced, if the remote transmission device is defective.

Installation and Operating Instructions Remote Transmission Device RAMOC® VD5-MO8

Innotas Produktions GmbH,
Friedrich-Engels-Str. 46, D-15745
Wildau
☎ + 49 (3375) 529649 0
✉ + 49 (3375) 529649 24
Email: info@innotas-service.de
www.innotas-service.de



Last update - 06.06.2014

Page 5/7

Configuration of the device:

The configuration of the device is performed in two steps:

1. Basic configuration for GSM usage:

The default setting of the device is done by the manufacturer. This ensures that the device automatically logs in into the mobile network after the SIM-card has been inserted and the device is powered on. With that the device can be accessed remotely for further application-specific settings in accordance with point 2. In order to do so, the customer has to specify its network / service provider with his order.

2. Configuration of the message concept and of inputs:

The configuration of inputs (input type, thresholds, debouncing etc.) and the message concept (reporting cycles, event driven messages) is carried out by remote access via the Internet control center.

configuration of RAMOC VD5-MO, VD5-MO8, VD5-ST2

Station:

Serial number:

Firmware version:

Phone number:

Unprocessed commands:

Name:

Location:

Data logging period: Seconds (60 minutes)

Online-spread: .. o'clock

Transmission period: minutes

Accu charging circuit: ☐

Alarm via SMS to phone number:

Alarm via SMS to phone number:

Alarm via SMS to phone number:

Alarm via SMS to phone number:

Alarm via SMS to phone number:

Alarm via SMS to phone number:

Alarm via SMS to phone number:

Alarm via SMS to phone number:

SMS-content:

by Input: ☐ History ☐ Min/Max ☐ Chart

Single station: ☐ Overview ☐ History ☐ History 2 ☐ Usertext

Other: ☐ Settings ☐ Help ☐ About Us ☐ Logout

Register: ☐

Questions?

Visibility for user group: ☐ Input 1 ☐ Input 2 ☐ Input 3 ☐ Input 4 ☐ Supply voltage ☐ Accu voltage

Input type:

Name:

A/C: Measurement unit:

D: Invert in the device: ☐ ☐ ☐ ☐

D: Invert in the control center: ☐

A: Create fill level forecast: ☐

- Warning limit: days days

- Alarm limit: days days

A: Sensortype 4...20 mA: ☐

A: show also in %: ☐

A: Sensor range: kg bar

A: Minimum value: kg bar

A: Low warning range: kg bar

A: High warning range: kg bar

A: Low alarm range: kg bar

A: High alarm range: kg bar

A: Low spread (0...254):

A: High spread (1...255):

C: Pulse multiplier:

C: Set counter value:

C: Counter period:

Response to an event:

Debouncing:

Create record: s s s

Alert message:

Installation and Operating Instructions

Remote Transmission Device

RAMOC® VD5-MO8

Innotas Produktions GmbH,
Friedrich-Engels-Str. 46, D-15745
Wildau
☎ + 49 (3375) 529649 0
☎ + 49 (3375) 529649 24
Email: info@innotas-service.de
www.innotas-service.de



Last update - 06.06.2014

Page 6/7

Specifications:

Type of the device:	RAMOC® VD5-MO8
Housing:	Plastic (polycarbonate), degree of protection IP65
Dimensions:	(W x H x D) 90 x 115 x 80 mm, plus fittings and antenna Typical mounting height with screw, antenna and cable: 230 mm
Mounting:	Wall mounting using screws, diameter 4 mm
Inputs:	<p>8 universal inputs, configurable as</p> <ul style="list-style-type: none"> - Analogue-Input <ul style="list-style-type: none"> ○ Resolution 8 Bit ○ prepared for sensors with: <ul style="list-style-type: none"> ▪ 4 .. 20 mA - Output (input resistance 125 ohms) ▪ 0 .. 20 mA - Output (input resistance 125 ohms) ▪ 0 .. 10 V - Output (input resistance 40 kohms) ▪ other measurement ranges possible on request - Counter-Input (digital) <ul style="list-style-type: none"> ○ for the connection of potential-free contacts ○ puls duration > 1000 ms ○ contact load < 4mA (pulsed) - Digital-Input <ul style="list-style-type: none"> ○ for the connection of potential-free contacts ○ contact load < 4mA (pulsed) <p>Other measurement ranges possible on request Clamping range: 0,08 .. 2,5 mm² Suitable cable diameter of M20 gland: 6 .. 12 mm</p>
Sensor power supply:	electronically controlled voltage generation for sensors typically 20 V, maximum total current of all sensors: typically 100 mA
Radio:	built-in GSM modem, quad band, from Cinterion SIM card required (3V or 1.8V)
Antenna:	external dual-band antenna with FME-connector 0 dB, which, if required, can be replaced by an alternative antenna
Power supply:	U (nominal voltage) = 6. 25V DC, when using the rechargeable battery backup 16 V DC, Clamping range: 0.08 .. 2.5 mm ² Suitable cable diameter of M16 gland: 4 .. 8 mm

Installation and Operating Instructions **Remote Transmission Device** **RAMOC® VD5-MO8**

Innotas Produktions GmbH,
 Friedrich-Engels-Str. 46, D-15745
 Wildau
 ☎ + 49 (3375) 529649 0
 📠 + 49 (3375) 529649 24
 Email: info@innotas-service.de
www.innotas-service.de



Last update - 06.06.2014

Page 7/7

Current consumption:	In normal operation typically 40 mA, in send / receive mode briefly up to 0.5 A
Temperature range:	-25 °C .. +65 °C
Manufacturer:	Innotas Produktions GmbH Friedrich-Engels-Str.46 D-15745 Wildau Germany
Scope of delivery:	Remote transmission device Standard antenna Pluggable mains adapter Installation and Operating Instructions Configuration instructions Configuration software (via web-site www.innotas-service.de)
Optional accessories:	Solar version in a cabinet with rechargeable battery and solar controller Control center software and hardware External antenna GSM-SIM-card on request